



FREEDOMLINK+ PG324S USER MANUAL



www.freedomlinkplus.com

Thank you for your purchase!

Before Getting Started

1. Make sure you have a good 4G signal
2. Make sure the SIM Card is securely inserted.
3. This SIM card can not be used in any other device and will cause the SIM card to be locked.
4. Charge the battery 12-14 hours for the first initial charge.

Precautions

- Refer service to qualified technicians only
- Do not disassemble or modify the transceiver for any reason.
- Do not expose the transceiver under direct sunlight for a long time or extremely hot conditions.
- Do not place the radio on an unstable surface.
- Keep the radio out of dust, moisture, and water.
- Do not operate the radio or charge the battery under explosive conditions.

Items Included with Your Purchase

1. Li-Ion Battery
2. Wrist Strap
3. Antenna
4. SIM Card
5. Belt Clip
6. 1 Year Airtime
7. 1 Year Warranty on radio
8. 6 Month Warranty on Accessories

Volume Knob
Radio On/Off

SOS

← Antenna

Push-To-Talk
Button

← Accessory
Connector

Group

← C Style
Charging Port

Member

Menu

← Exit

Member

← Group



Menu Keys

Menu List

Short press the menu key to enter the menu list

Keypad Lock

Long press the menu key to unlock/lock the keypad. Lock symbol will be displayed on the screen.

Group Select - Group Call

Select a group to initiate group calls

Member Select - Private Call

Select a member to initiate a private call **Note:** If there is no operation within 30 seconds, the single call status will be automatically exited. Either party can manually exit the single call by pressing the back button and return to the original group call status.

Common Functions

Power On

In the off state, turn the volume knob clockwise or press the key to start up and it will start up. After successful start up, the green light is always on and flashes.

Adjust Volume

Rotate the volume knob to reach the appropriate volume or use the side key to adjust the up and down keys

Single Call

When you enter the single call mode, you can choose the users of the current group online and let them enter the single channel mode with you. When one of you quits the single call mode, the two parties will exit the single call mode at the same time and return to the original group.

Common Functions Continued

Group Call

Just like a regular two way radio, when you speak in a group, all other people in this group will receive you call.

Member Selection

Directly enter the member list, select the corresponding member, and press the PTT.

Using an Earpiece

Please only use earpieces designed for the PG324S radio. Press the PTT button on the headset to initiate a call. Release the PTT button to release the call.

Common Functions Continued

SOS - Radio Needs To Have SOS Enabled By the Dealer

A user may press and hold the SOS key on top of the radio for 3 seconds. The radio will then display "SOS Succeed" until the user presses a button on the radio. After sending the SOS, the radios that are on the same channel that the sender is on will begin to alarm and flash red and white on their screen. The radio name of the sender will scroll across the screen along with the latitude and longitude of the radio. Radio needs to have GPS enabled and has a GPS signal to obtain the lat and long of the SOS radio.

LED Indicators

Low Battery

Red light flashes slowly

Transmitting

Red light is solid

Receiving

Green light is solid

Standby

Green light is flashing slowly (0.5 seconds on, 3.5 seconds off)

Searching Network

Green light is flashing fast

Programming

Please contact us at info@freedomlinkplus.com for any programming changes you require. Programming changes can be made over the air.

Examples of programming changes:

- Names (Between 2-11 Characters)
- Groups

Warranty

Thank you for your interest in the products and services of FreedomLINK+. This Limited Warranty applies to physical goods, and only for physical goods, purchased from FreedomLINK+ (the "Physical Goods").

What does this limited warranty cover?

This Limited Warranty covers any defects in material or workmanship under normal use during the Warranty Period. During the Warranty Period, FreedomLINK+ will repair or replace, at no charge, products or parts of a product that proves defective because of improper material or workmanship, under normal use and maintenance.

What will we do to correct problems?

FreedomLINK+ will either repair or replace the Product at no charge, using new or refurbished replacement parts.

How long does the coverage last?

The Warranty Period for Physical Goods purchased from FreedomLINK+ is 1 year from the date of purchase. A replacement Physical Good or part assumes the remaining warranty of the original Physical Good or 1 year from the date of replacement or repair, whichever is longer. warranty on accessories.6-month

What does this limited warranty not cover?

This Limited Warranty does not cover any problem that is caused by: ● conditions, malfunctions, or damage not resulting from defects in material or workmanship

What do you have to do?

To obtain warranty service, you must first contact us to determine the problem and the most appropriate solution for you.



405 N. Hastings Pl.
Eau Claire, WI 54703
(715) 832-6763

info@freedomlinkplus.com
www.freedomlinkplus.com